


## RCI 24' LAND CRUISER FUEL SKID

### INSTALLATION GUIDE

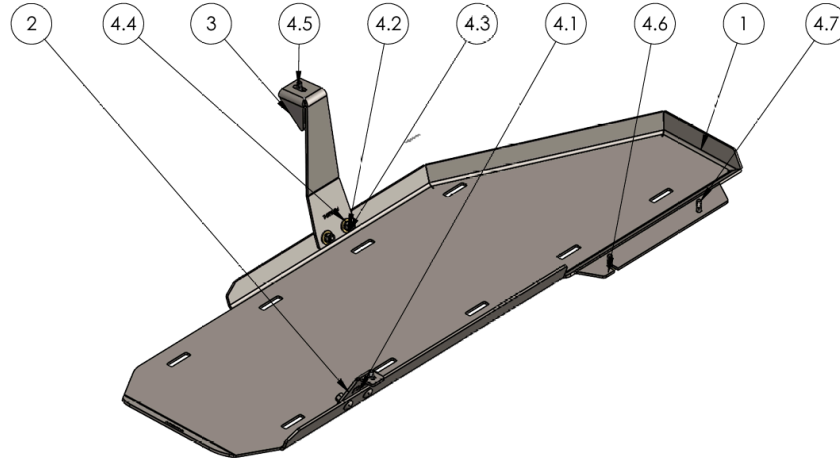


ITEM NO.	DESCRIPTION	QTY.
1	24 LC Fuel Skid	1
2	24 LC Fuel Skid Passenger Mount	1
3	24 LC Fuel Skid Driver Mount	1
4	24 LC Fuel skid Hardware Kit	1
4.1	3/8-16 X 1 CARRIAGE BOLT	4
4.2	3/8-16 FIN HEX NUT	4
4.3	3/8 FLAT WASHER	4
4.4	3/8 SPLIT LOCK WASHER	4
4.5	M8-1.25 X 20MM HEX FLANGE BOLT	2
4.6	5/16 FLAT WASHER	4
4.7	M8-1.25 X 30MM HEX FLANGE BOLT	2

UNLESS OTHERWISE SPECIFIED:  DIMENSIONS ARE IN INCHES TOLERANCES: FRACTIONAL ±0.010 ANGULAR BEND ±0.5 TWO PLACE DECIMAL ± 0.015 THREE PLACE DECIMAL ± 0.010	PROPRIETARY AND CONFIDENTIAL  THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF RCI Offroad. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF RCI Offroad IS PROHIBITED.	DRAWN	NAME	DATE
		KD		1/13/25
		Export Date		
		1/14/2025		
RCI OFFROAD				
TITLE:  24 Land Cruiser Fuel Skid				
Item Number FG-00573				REV 1
DO NOT SCALE DRAWING		SCALE: 1:16 WEIGHT:		SHEET 1 OF 1

**\*\*Use hand tools, impact wrenches may cause damage if over torqued.\*\***

## **Preparation**

- 1) Remove the 3 bolts shown below and the OEM skid plate.

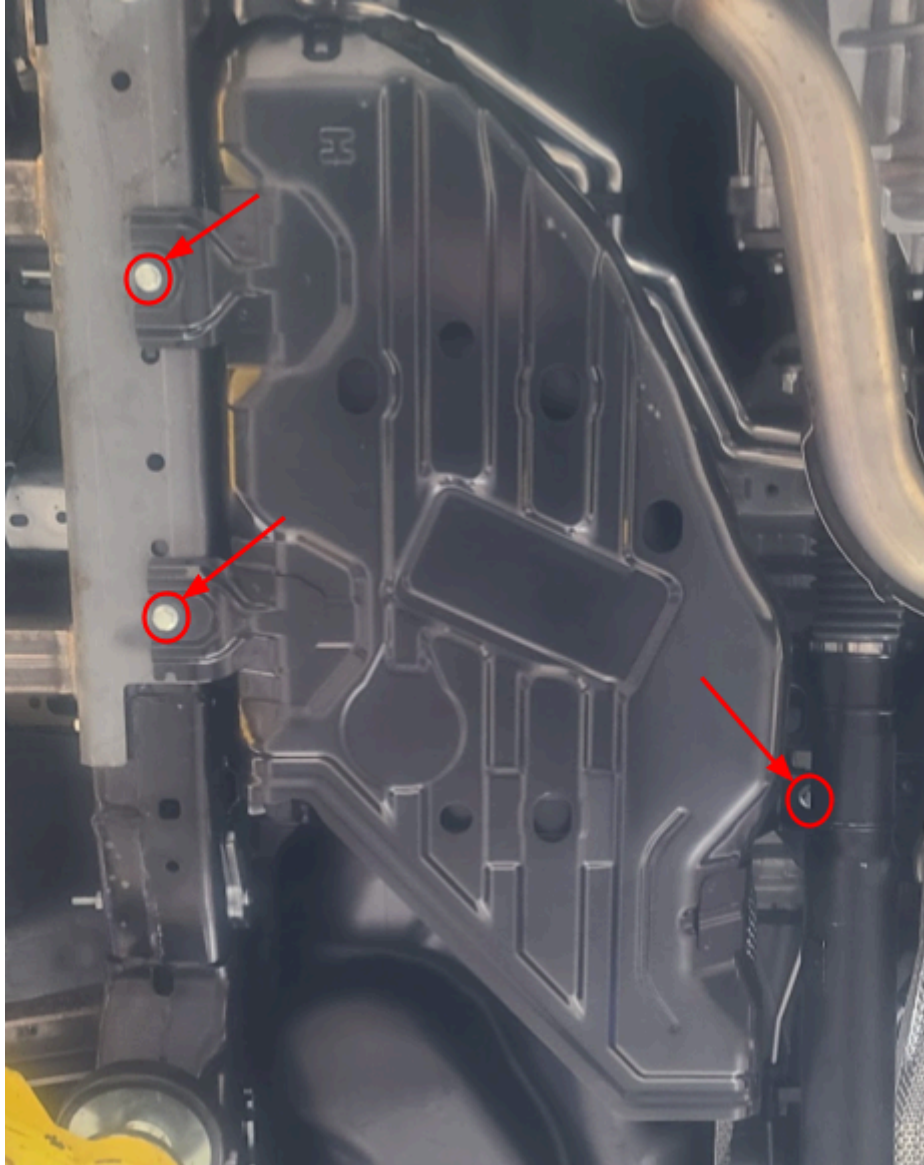

*Figure 1: OEM skid removal bolt locations.*

## Installation

- 2) Begin by unpacking and removing all components and hardware. Please verify that all hardware and mounting components are present. Reference your original order invoice and verify all items are accounted for.
- 3) If you have purchased sliders, install them first.
- 4) Collect 4x  $\frac{3}{8}$ " Bolts, 4x  $\frac{3}{8}$ " washers, 4x  $\frac{3}{8}$ " lock washers, 4x  $\frac{3}{8}$ " nuts, and the driver, and passenger brackets. Assemble the passenger "RCI" and driver "LC 250 F" brackets and hardware as shown. Leave hardware loose for on vehicle adjustment.


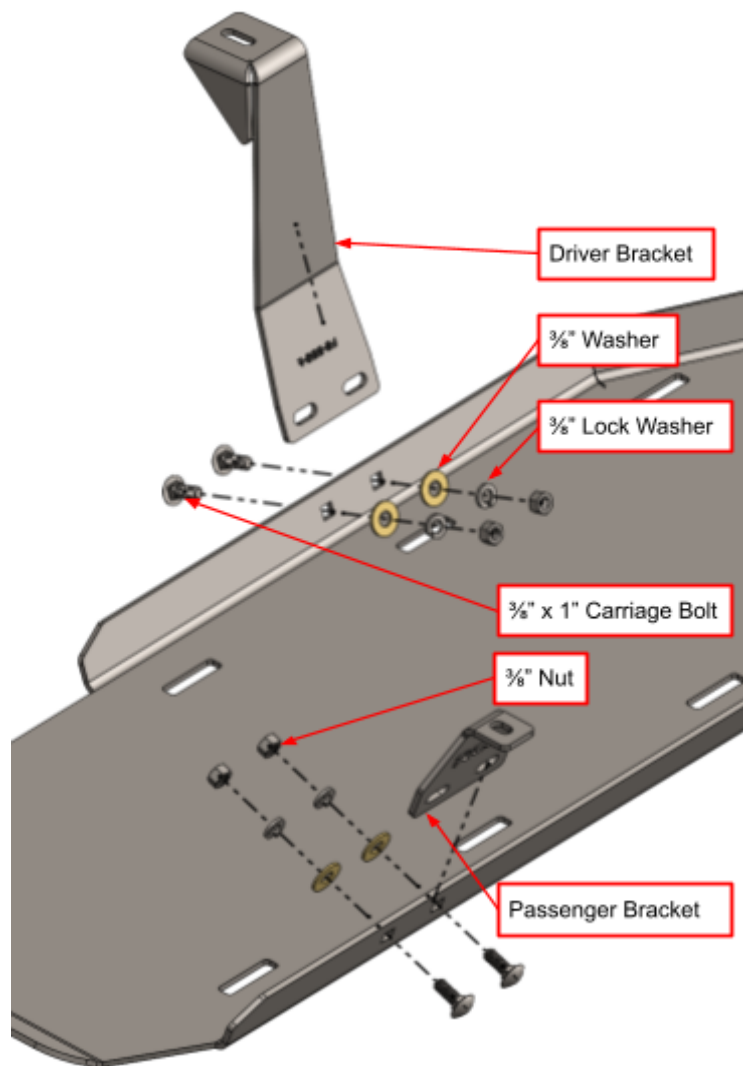


Figure 2: Bracket installation



- 5) Prepare 2x M8 x 20mm bolts, 2x M8 x 30mm bolts, and 4x 5/16" washers.

Thread one M8 & washer into the hole that aligns with the main skid slot. Lift the skid into place and slide the slot onto the bolt. Thread the remaining 3 M8 bolts into their respective locations.

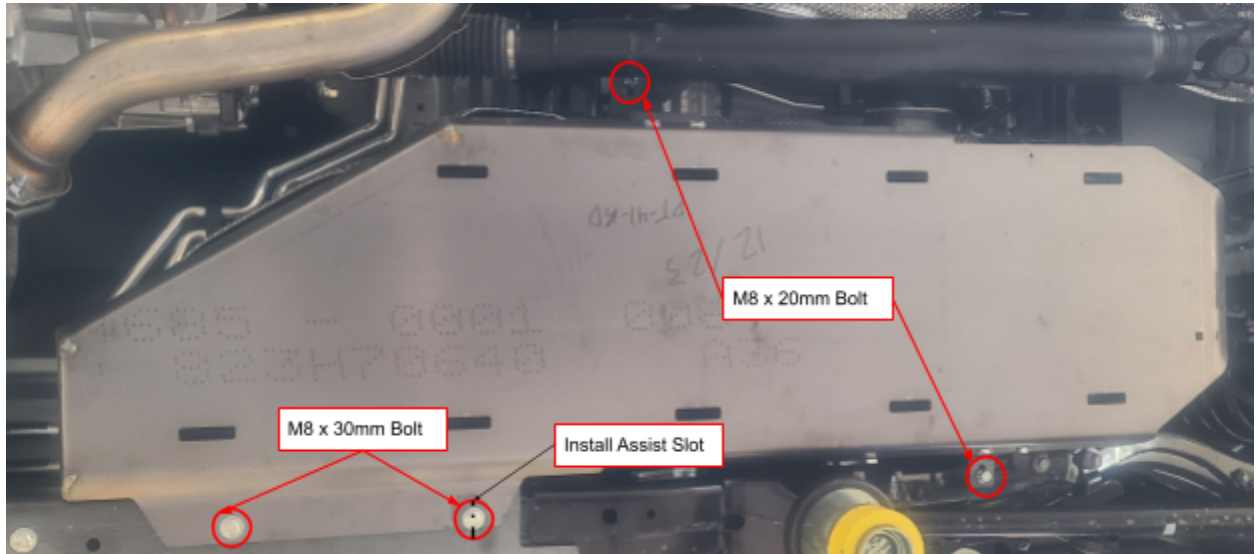

*Figure 3: Skid installation*

- 6) Tighten the mounting bolts.
- 7) Tighten the lower passenger and driver bracket bolts using a crescent wrench.

**Enjoy your new RCI protection!**



**Share your new install with us on social media!**  
**We love seeing our products out in the wild!**



**[www.rcimetalworks.com](http://www.rcimetalworks.com)**

**[sales@rcioffroad.com](mailto:sales@rcioffroad.com)**

**970-797-3089**

REV: 1 | 9/29/2022

Disclaimer: The products sold by RCI Metalworks are intended for off-road use only, should not be modified, and are for use only on the vehicle(s) specifically stated. RCI Metalworks makes no warranties express or implied, including of fitness for a particular purpose or merchantability. RCI Metalworks will not be liable for any damages arising out of the use or misuse of its products. It is the customers' responsibility to ensure the products are safely and properly attached to the vehicle, and all products should be installed by trained professionals. We strive to maintain extremely high quality standards; however, all RCI Metalworks products are individually handcrafted, may vary slightly, and may contain minor imperfections. Due to the nature of raw aluminum, the material may have minor scratches and other blemishes caused by the manufacturing process, especially on the back side of product. RCI Metalworks is constantly seeking to improve its products and reserves the right to make changes to any product.

