




INSTALLATION GUIDE

2024-UP | TOYOTA LAND CRUISER

[ADD-ON REAR SHELF FOR WINDOW MOLLE]

1624-70220

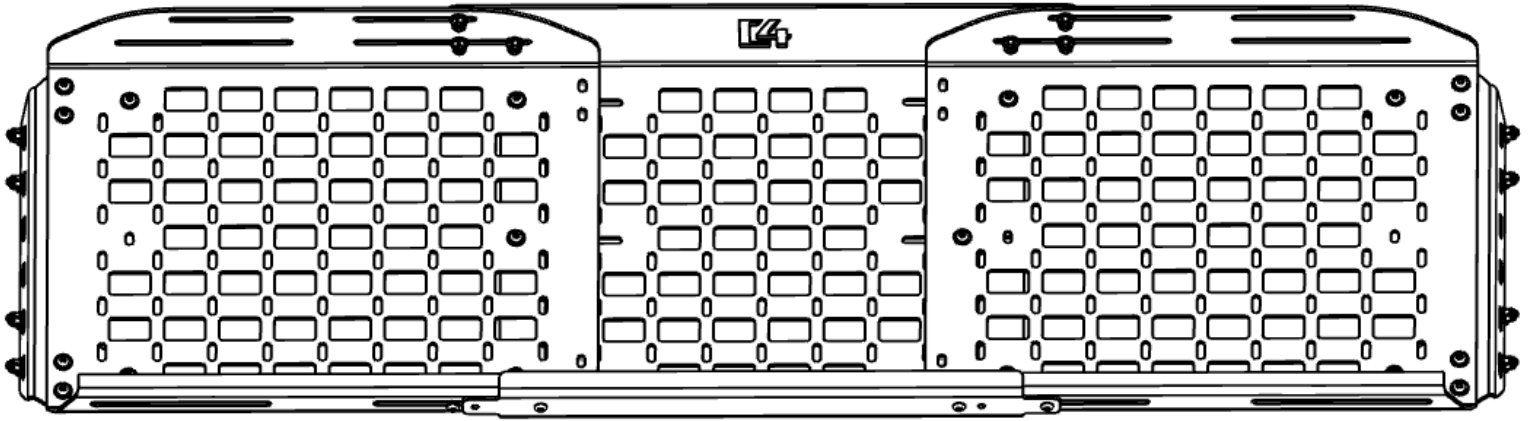

TOOLS REQUIRED

- 7/16 sockets
- 7/16 wrenches
- 5/32 Hex

SKILL LEVEL

- Easy

TIME REQUIRED

- Approximately 30 Minutes

⚠️ WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION ⚠️

-BEFORE YOU INSTALL THIS KIT-

Read and understand all instructions, warnings, cautions, & notes contained in this installation instruction guide. Consult your vehicle owner's manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.

Customer Service: 1-605-721-2911
C4 Fabrication is **not** responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components.

We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle.

Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information:

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover

ALWAYS WEAR EYE PROTECTION WHEN OPERATING POWER TOOLS

[A.]

36x



1/4-20 X 1/2" BUTTON HEAD BOLT

5/32 ALLEN

[A1.]


54x



1/4" FLAT WASHER

[A2.]

36x



1/4-20 NYLON LOCK NUT



7/16 WRENCH

INSTALL

- A: 1/4-20 X 1/2" BUTTON HEAD BOLT (8X)
- A1: 1/4" FLAT WASHER (8X)
- A2: 1/4-20 NYLON LOCK NUT (8X)

STEP 1



Using a 5/32 allen, 7/16 wrench and the provided hardware (A, A1, A2). Install the shelf mounting brackets in the desired position as shown below. Ensure brackets are even on both sides. (Tighten all hardware).

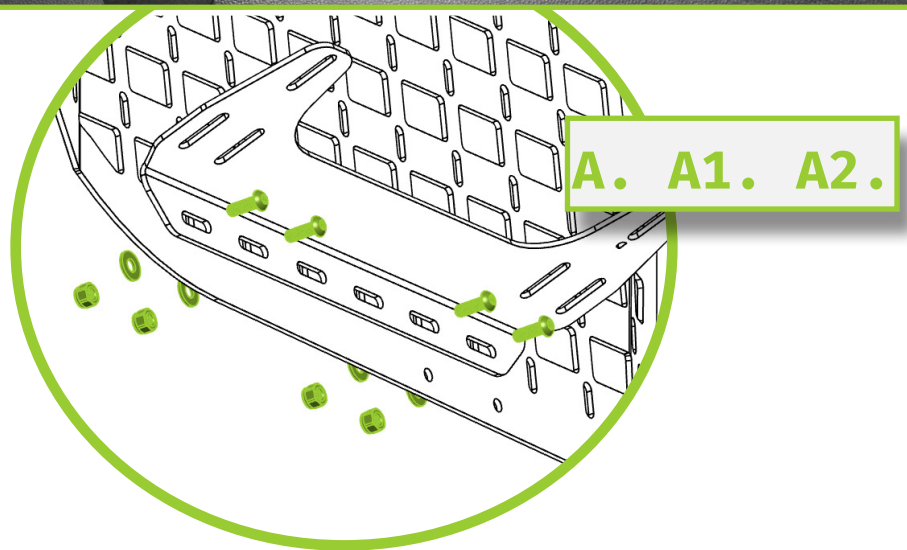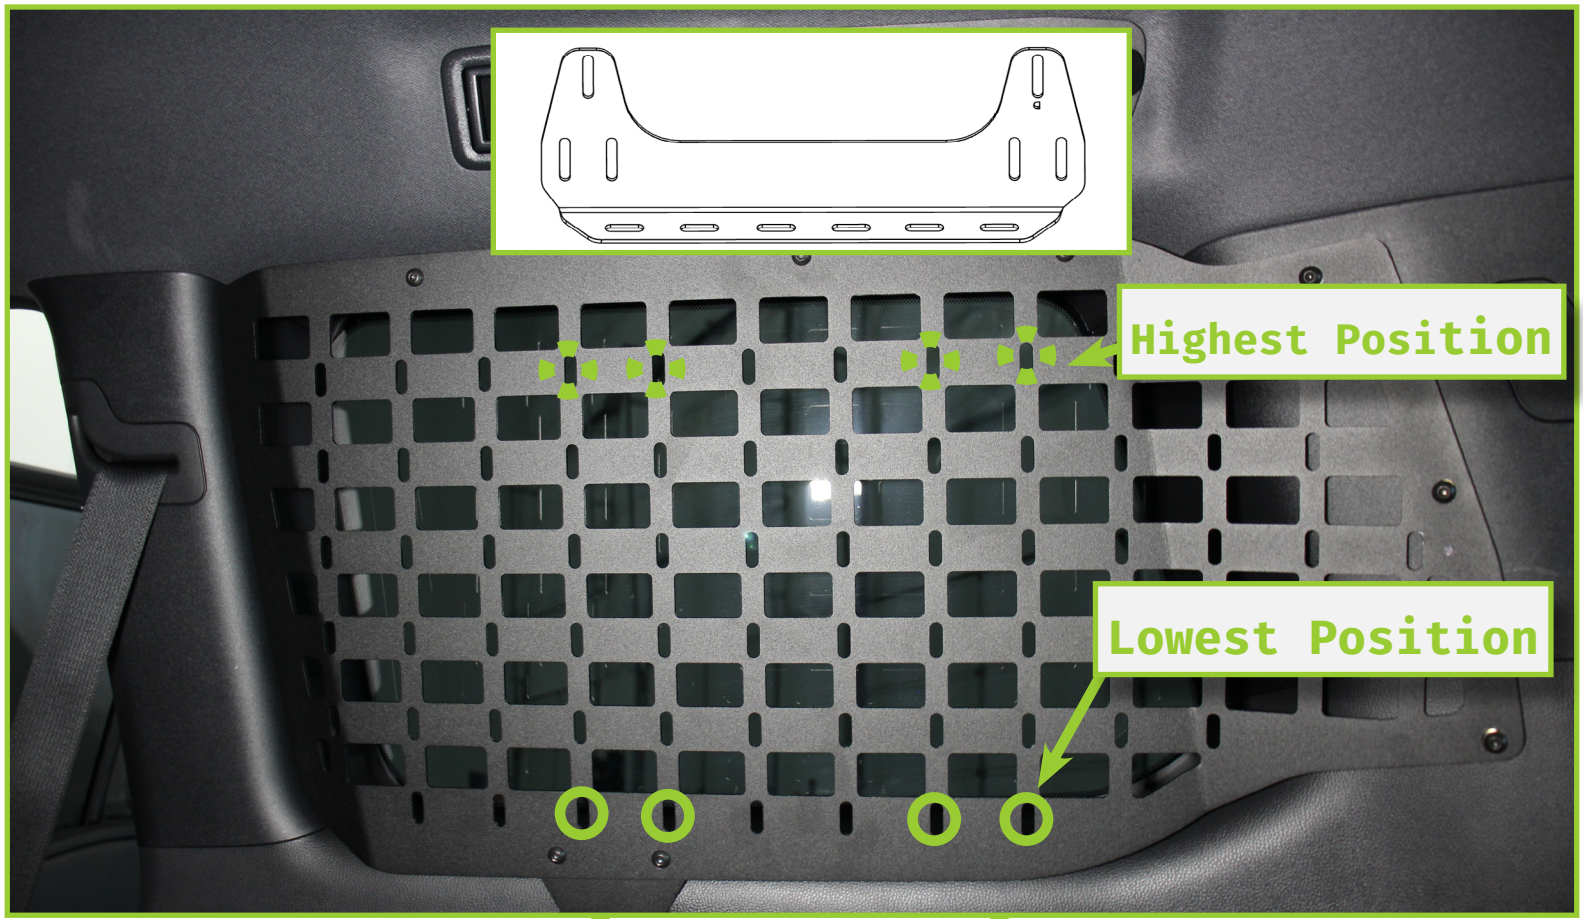

- A: 1/4-20 X 1/2" BUTTON HEAD BOLT (6X)
- A1: 1/4" FLAT WASHER (6X)
- A2: 1/4-20 NYLON LOCK NUT (6X)

STEP 2



Using a 5/32 allen, 7/16 wrench and the provided hardware [A, A1, A2]. Secure the back edge of the outer panels to the back edge of the middle panel. Repeat on other side. (Leave all hardware loose at this time).

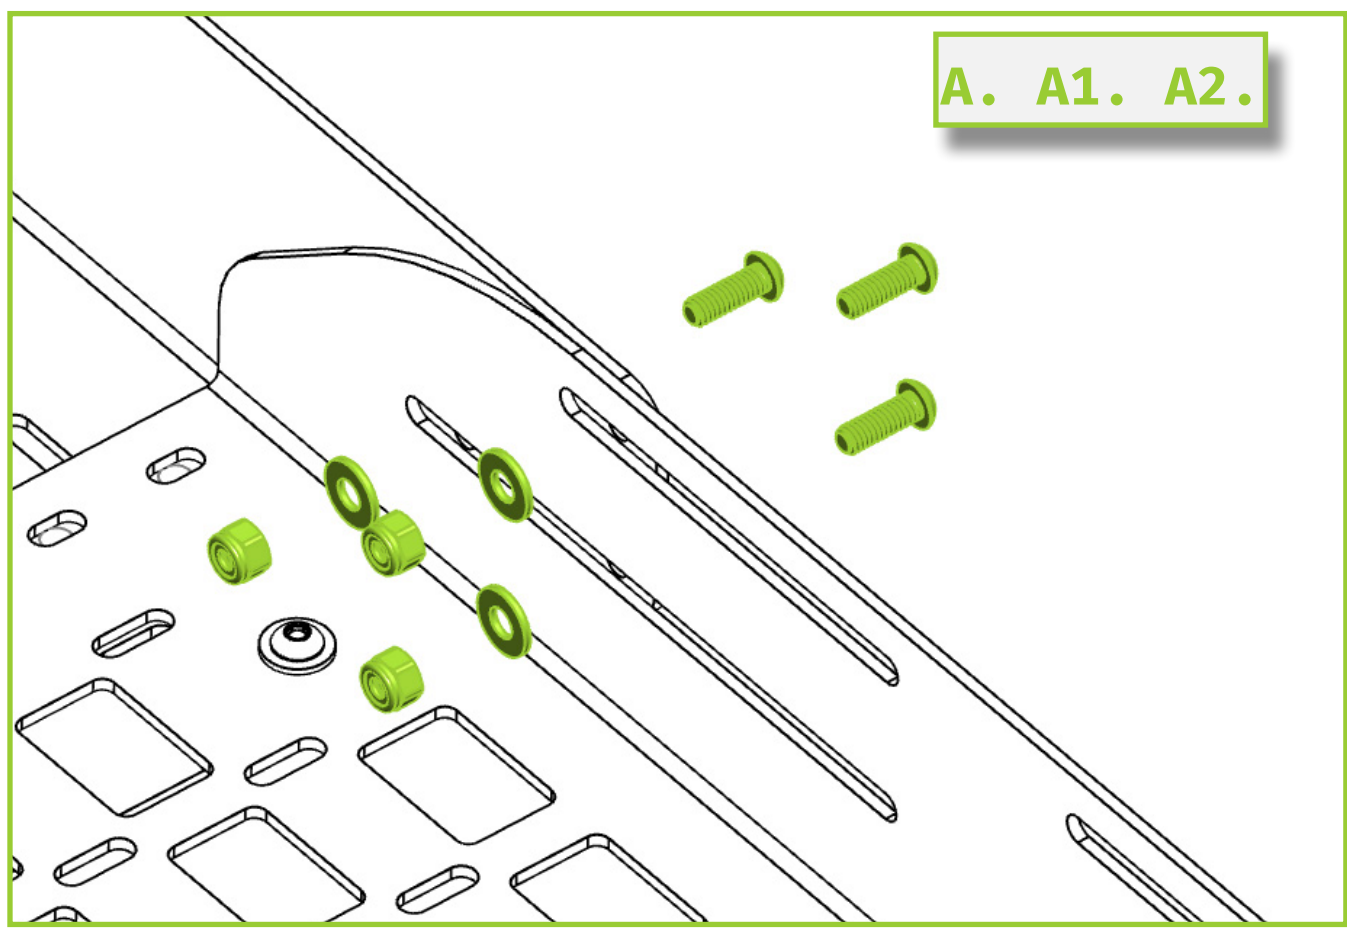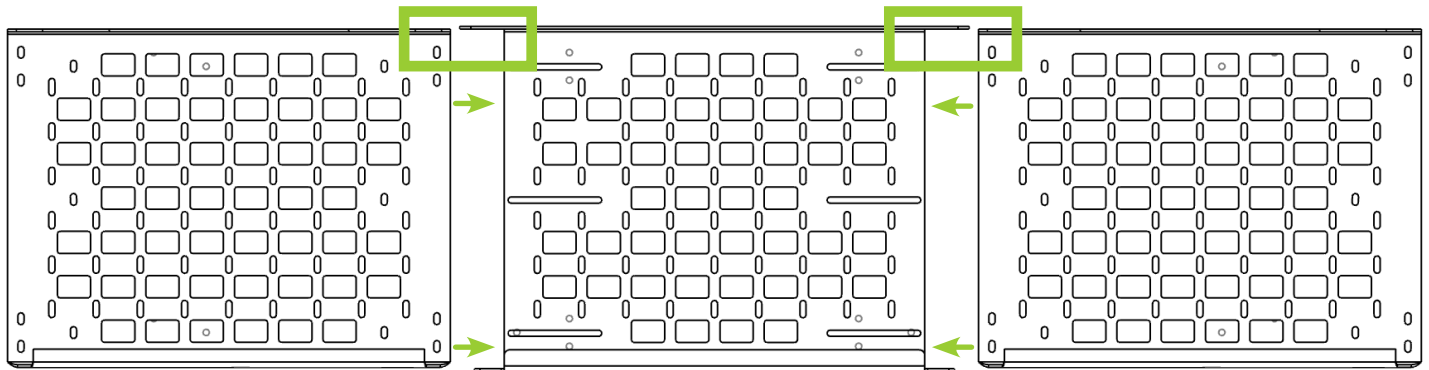

- A: 1/4-20 X 1/2" BUTTON HEAD BOLT [4X]
- A1: 1/4" FLAT WASHER [4X]
- A2: 1/4-20 NYLON LOCK NUT [4X]

STEP 3



Using a 5/32 allen, 7/16 wrench and the provided hardware (A, A1, A2). Install the outer panels to the inner panel. Repeat on other side. (Leave all hardware loose at this time).

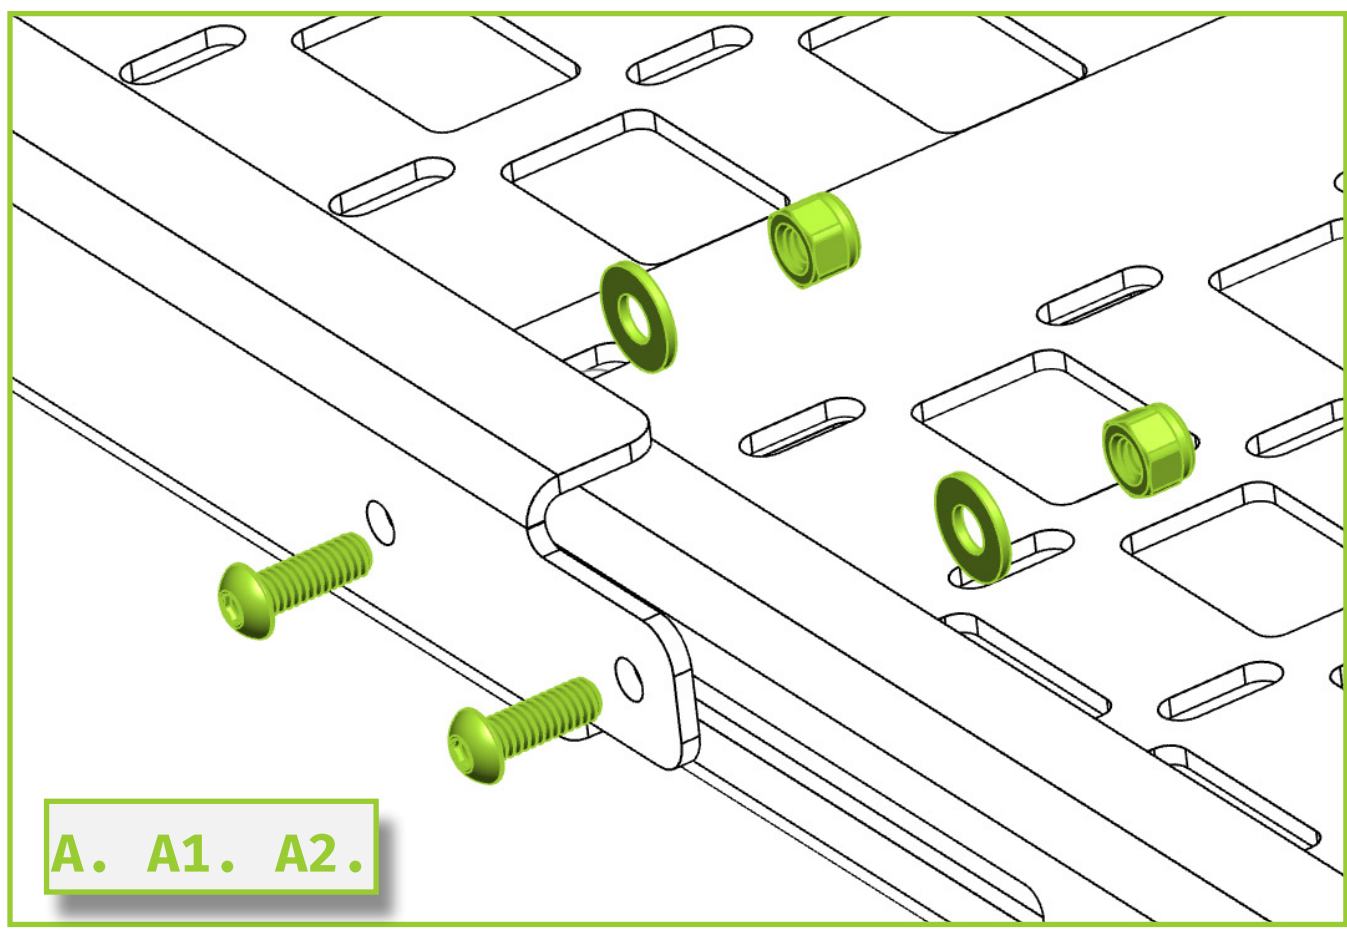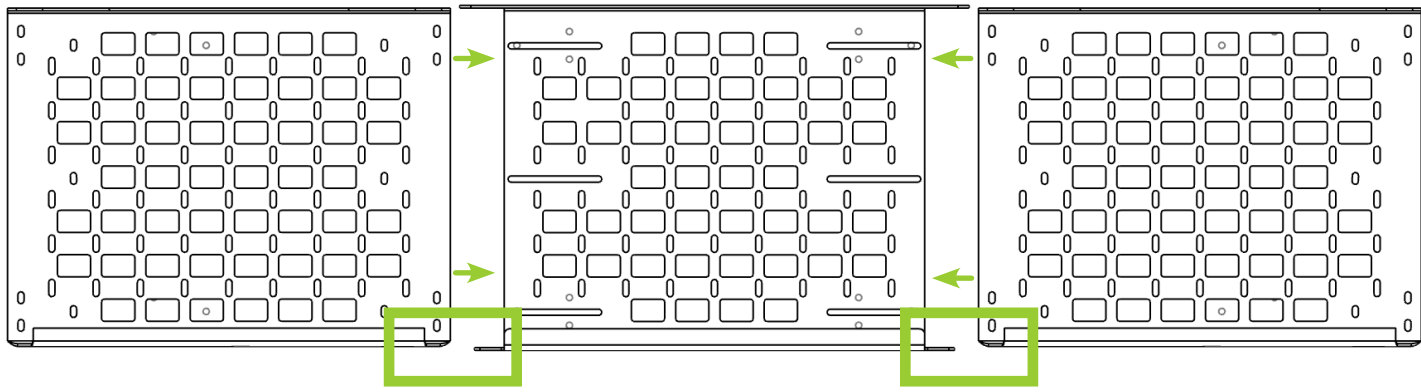

- A: 1/4-20 X 1/2" BUTTON HEAD BOLT (6X)
- A1: 1/4" FLAT WASHER (6X)
- A2: 1/4-20 NYLON LOCK NUT (6X)

STEP 4


Using a 5/32 allen, 7/16 wrench and the provided hardware (A, A1, A2), secure the outer panels to the middle panel as shown below. Repeat on other side. (Leave all hardware loose at this time).

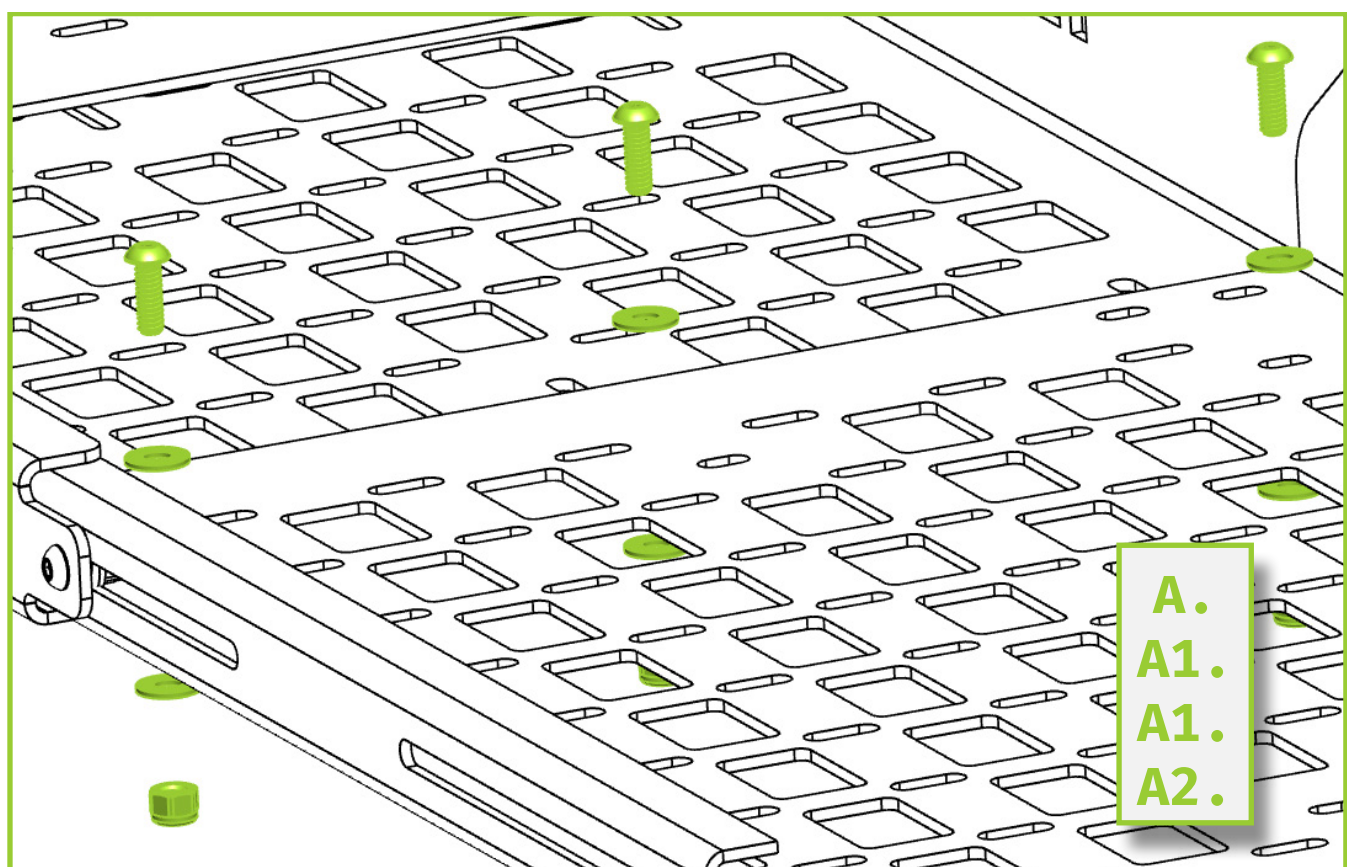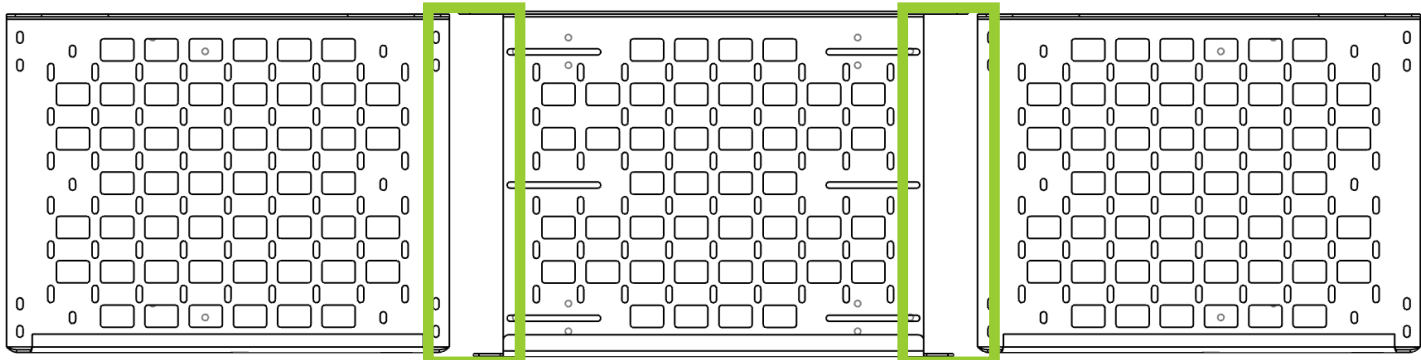

INSTALL


STEP 5

With the shelf hardware loose, you can expand the shelf in and out. Place the shelf inside the vehicle and adjust as needed to reach the brackets installed on **step 1**.

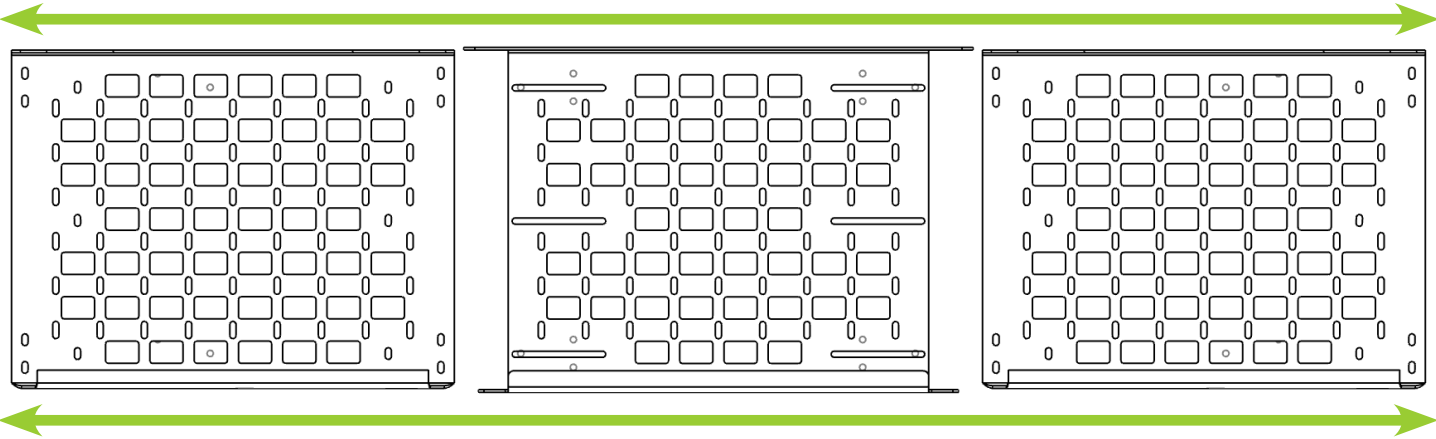

STEP 6

Using a 5/32 allen, 7/16 wrench and the provided hardware (A, A1, A2) to install the outer panels to the mounting brackets as shown below. (Tighten all hardware at this time working from the outside to the inside).

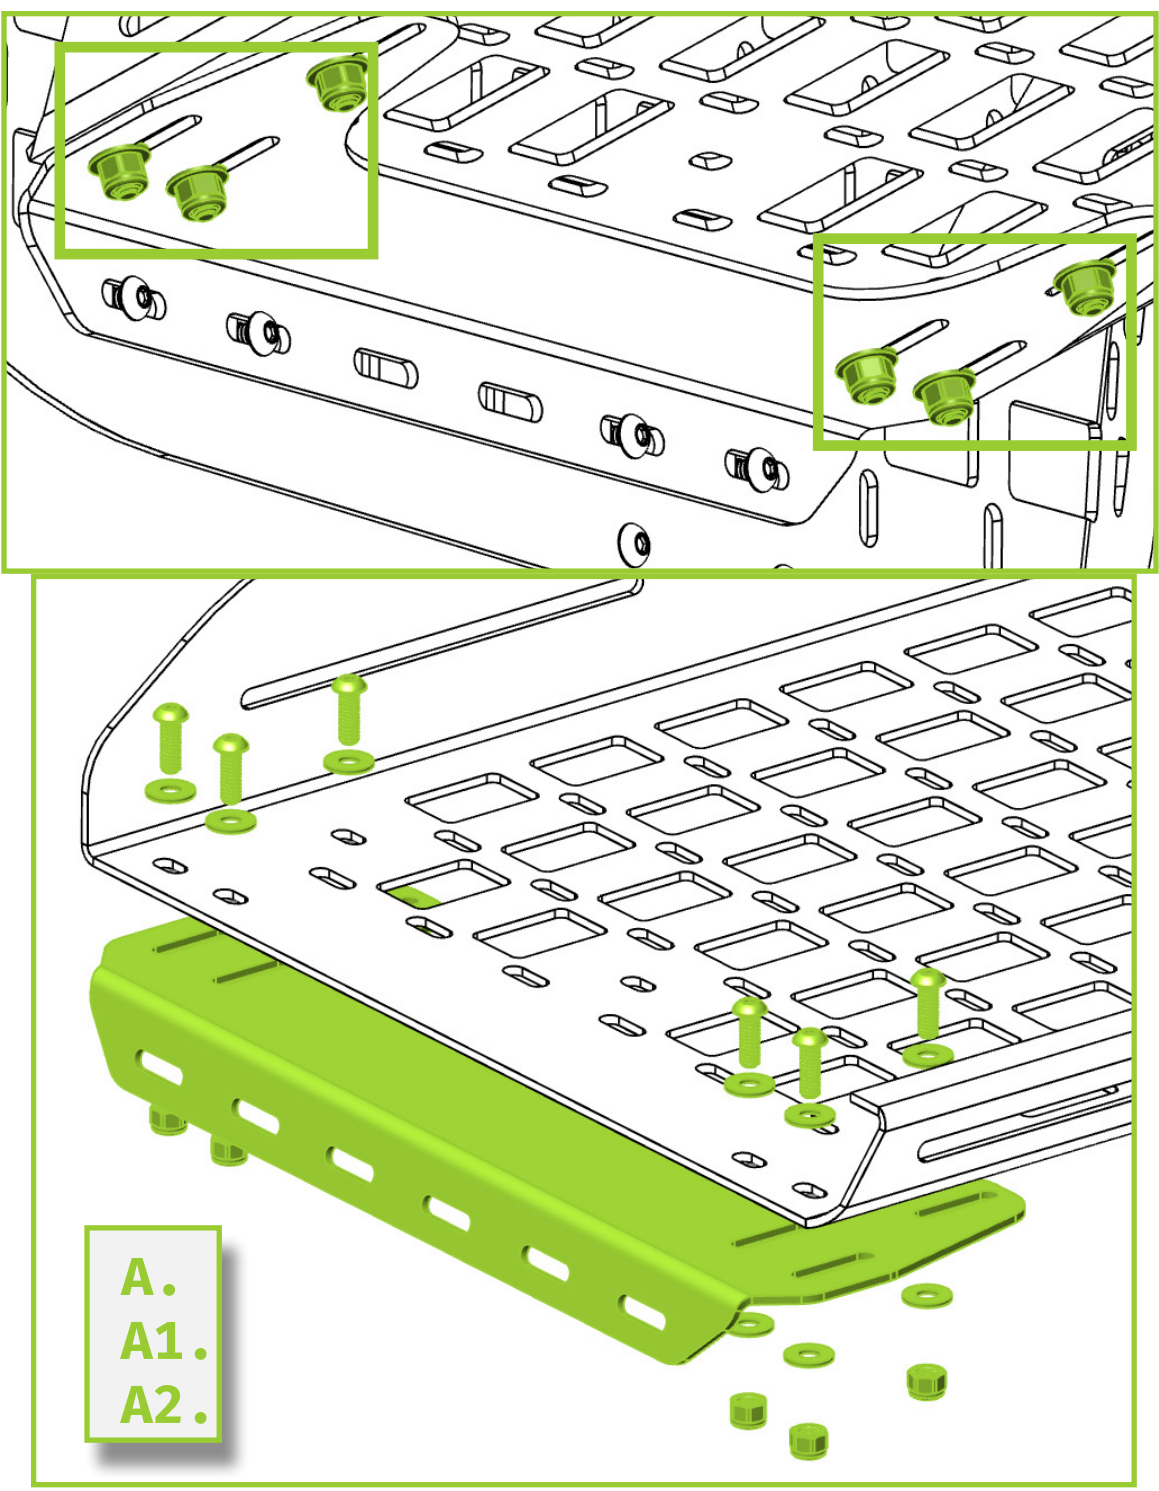



QUESTIONS OR CONCERNS?

CALL: 1-605-721-2911 OR EMAIL: sales@c4fabrication.com