

DK-816885R INSTRUCTIONS




PARTS INCLUDED

Quantity	Item Description	Part #
2	IFP Smooth Body Shock	DK-816885R-A1200
2	Upper Stem Sleeves	DK-816885R-A1202

## 1. TOOLS NEEDED

a. Gather tools needed for the job:

- Torque wrench
- Socket wrench
- 17 mm socket
- 19 mm socket
- 10 mm wrench
- 19 mm wrench

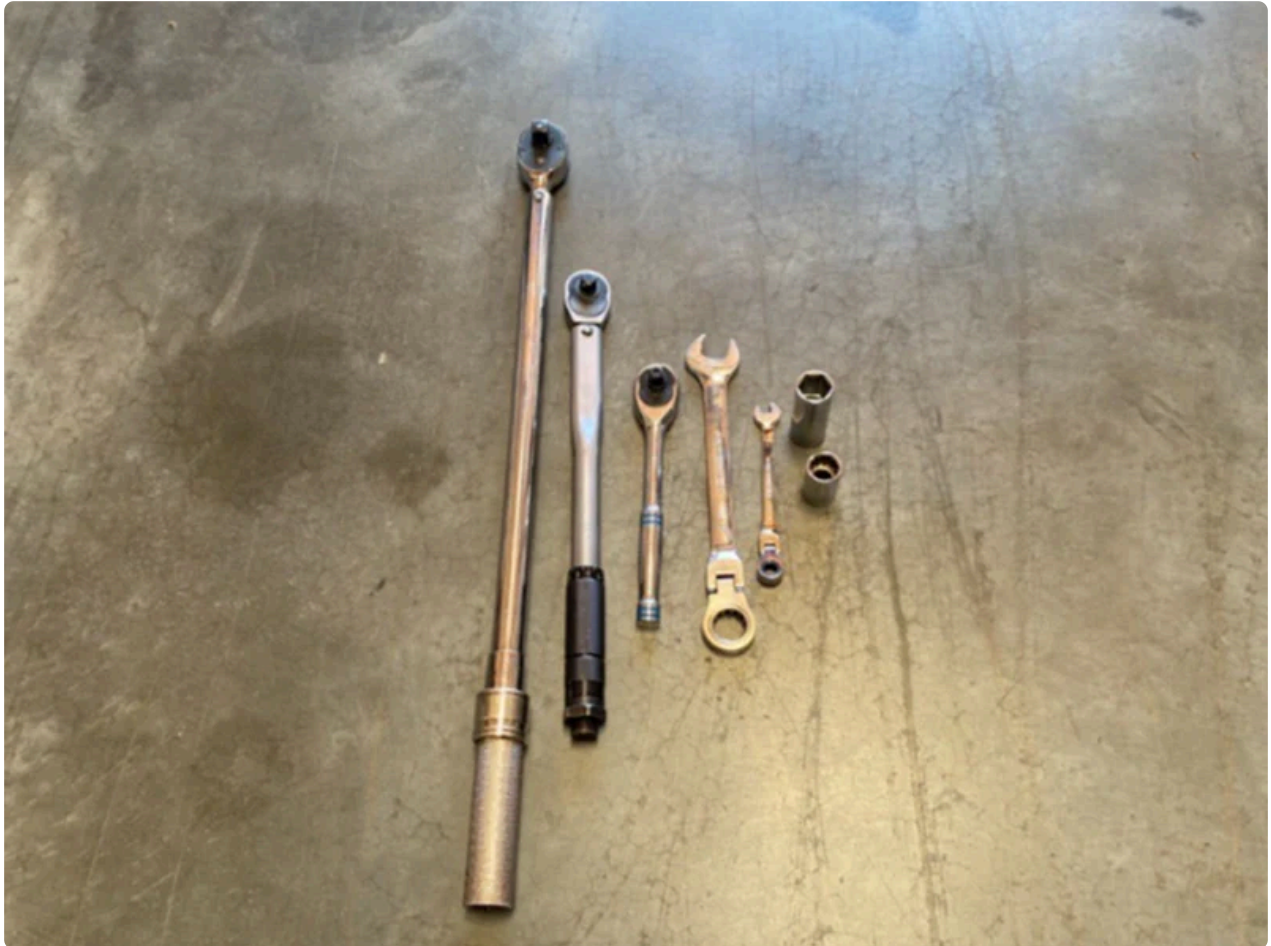

## 2. RAISE THE VEHICLE AND PREPARE FOR INSTALLATION

- a. Safely support the vehicle by the frame and remove the wheels.
- b. Support the rear axle.



### 3. REMOVE SHOCK

- a. Remove the lower shock hardware. Do not discard.
- b. Remove the upper shock hardware. Do not discard the bushings.
- c. Remove the shock from the vehicle.






## 4. SLEEVE INSTALLATION

- a. Install the included sleeve onto the top stem.



## 5. FACTORY BUSHING INSTALLATION (RECOMMENDED)

- a. Install the factory lower bushing.
- b. Note: Ensure the larger inner diameter of the lower bushing is facing the frame.

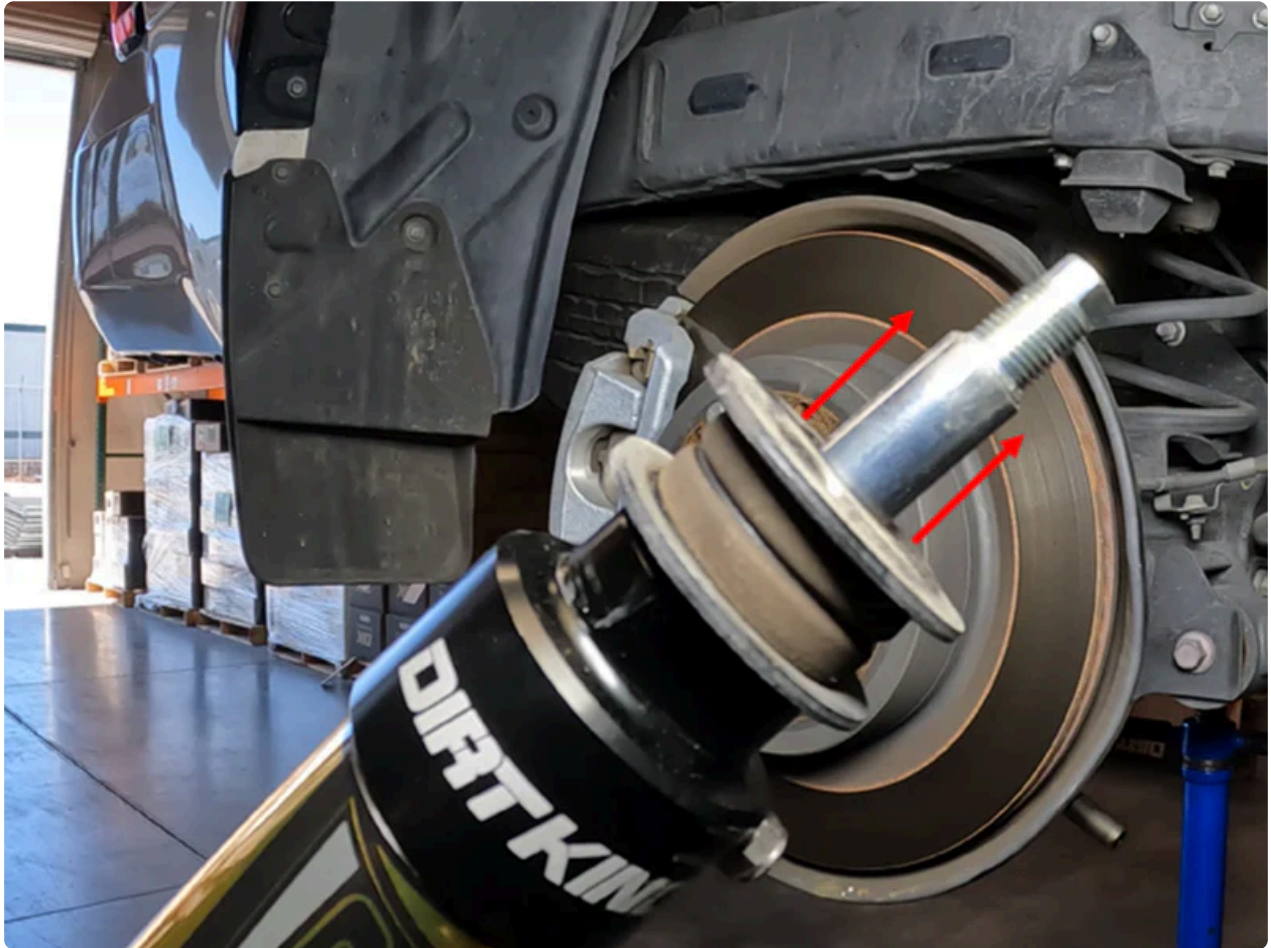

## 6. INCLUDED BUSHING USE (OPTIONAL)

- a. The OEM bushings are recommended; however, the included bushings can be used if needed. Using the included bushings will not require the additional sleeve.
- b. Note: Ensure the locating ridges on the bushings are facing the frame.





## 7. INSTALL THE DIRT KING SHOCKS

- a. Install the upper shock stem into the mount. Ensure the locating ridges on the bushings are centered within the mount and install the included nut. Torque to 18 ft-lbs.
- b. Install the lower shock hardware and torque to 72 ft-lbs.
- c. Note: Ensure the upper hardware is torqued prior to the lower hardware.





## 8. REVIEW YOUR WORK AND REPEAT STEPS ON THE OTHER SIDE OF THE VEHICLE

- a. Inspect all components to ensure they are properly installed.
- b. Reinstall the wheels and torque the lug nuts to your wheel manufacturer's specifications.



**FOR WARNINGS AND DISCLAIMERS, VISIT DIRT KING DISCLAIMER  
([HTTPS://DIRTKING.COM/PAGES/DISCLAIMER](https://DIRTKING.COM/PAGES/DISCLAIMER)).**

