



**Toyota
Tundra 22+
Fog Light Installation Instructions**



Heretic

1168 West 500 North Suite 500
Centerville UT, 84014
801-725-4824
Support@hereticstudio.com

Heretic

BEYOND LUMENS

Tools Needed for Install:

Basic tool set

Recommended Items for Install:

Nylon Pry Tool Set


Kit Contents: 1x Plug and Play Harness 1x Driver Side Bracket Set
1x Passenger Side Bracket Set 1x Hardware Kit

Step 1: Assemble the brackets. Using the supplied carriage, nyloc bolt, and washer, attach the lights to the bracket using a 7/16 wrench. When connecting the lights, ensure to leave the bolts slightly loose for adjustments later in the installation. Repeat the process for the other side, keeping in mind the brackets will be a mirror image.


PASSENGER SIDE



Step 2: Release the tabs holding the lower grille fascia. Begin near the center reaching through the grille and finding the tabs. The top tab is released by pushing the center down, and the bottom tabs release by pushing the tabs up.

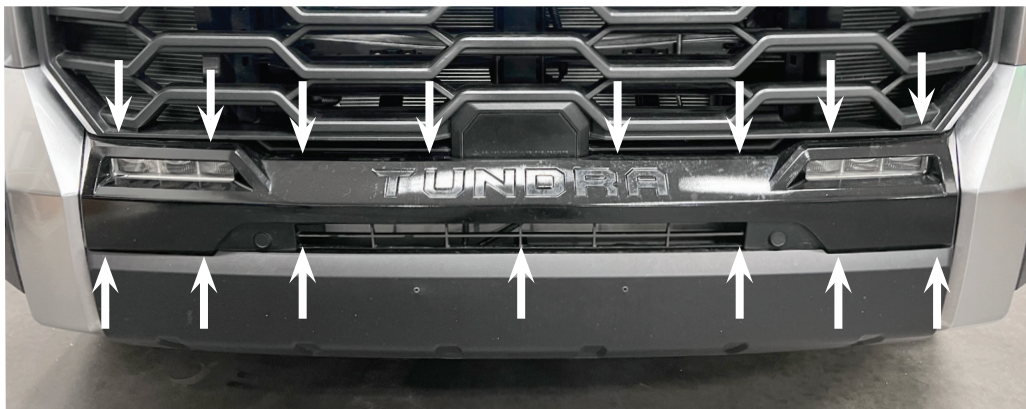

Once the tabs in the center are released, the fascia won't be completely loose. The fascia is also held in by the trim pieces on the left and right sides. The trim covering the fog light is beneath the side trim piece. The fog light fascia will need to be pushed toward the vehicle's center and then pulled away from the car to be released. This step will require some patience, and we recommend placing some painter's tape on the trim pieces to avoid scratching them. Also, using a nylon panel removal tool will help prevent scratches.

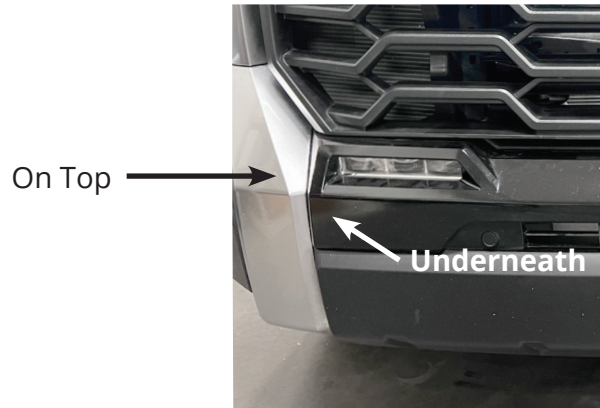

Step 3: With the fascia removed, uninstall the factory fog light using a Philips head screwdriver or carefully with a drill. Place the hardware in a safe location because it will be reused when installing the new fog lights. Now that the fog lights are removed, run the wire harness from the battery down to the fog light pockets. Make sure to zip the wiring away from any hot, sharp, or moving parts.



Connect the factory adapter plug to the factory fog light harness and then plug the blade terminal into the **GREEN** female spade connector. Leave the light bar plug accessible in the pocket. Route the other light bar plug over to the remaining side and leave it accessible. With the harness installed, connect the light bar to the harness and install the 6" light bar into the factory location using the factory hardware. Leave the hardware semi-loose to adjust the beam angle later in the install.

[illegible]

Your install is now complete! Thanks for choosing Heretic!



Heretic

BEYOND LUMENS

1168 West 500 North Suite 500
Centerville UT, 84014
801-725-4824
Support@hereticstudio.com