



Parts Included

Quantity	Item Description	Part#
2	Rear Shock	DK-636889R-A1200

Please check that all items are present before installation. If for any reason there is an item or items missing send an email to sales@dirtking.com with proof of purchase and a picture of parts received.



Before installing, read all instructions. Only certified mechanics should install Dirt King products. Mandatory wheel alignment and ADAS calibration at certified facilities are required after suspension modifications. Failure to do so can lead to handling problems and safety risks. Dirt King is not responsible for damages from improper installation or misuse. Adhere to your vehicle manufacturer's recommendations. For more information, visit <https://dirtking.com/pages/disclaimer>



1. Remove Rear Shocks

- a. Safely secure the vehicle on a flat level surface. Chock the front wheels and raise the rear of the vehicle. Support the frame with jack stands.
- b. Remove lower shock hardware.
- c. Remove upper shock hardware.
- d. Remove shock from vehicle.

Note: Do not discard hardware.




2. Install Dirt King Shocks

- a. Install top of shock to the upper mount using the factory hardware and torque to factory spec: **70ft lbs.**
- b. Install bottom of shock into lower mount using the factory hardware and torque to factory spec: **118ft lbs.**

Note: Both shocks will have reservoirs facing inward towards the center of the vehicle.

3. Review your work and repeat steps to other side

- a. Confirm everything is installed correctly.
- b. Safely remove frame stands and lower the vehicle.
- c. Remove the front wheel chocks.

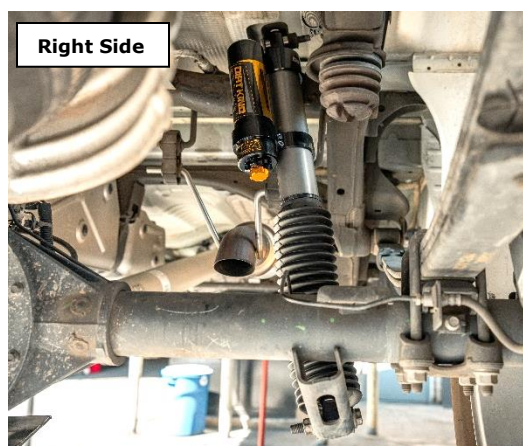

For warnings and disclaimers visit <https://dirtking.com/pages/disclaimer>.