



INSTALLATION GUIDE

SPRINTER REAR DOOR EMBLEM

SP1141B



TOOLS REQUIRED (NOT INCLUDED)

- + 5/32" ALLEN WRENCH
- + T25 TORX
- + PRY TOOL

INSTALL INFO

TIME TO INSTALL THIS PRODUCT: 15 MINUTES

Additional help is suggested for a few of the install steps.

BEFORE YOU START

Please inspect the product and packaging upon delivery to ensure there are no issues and that all parts and hardware are accounted for.

Contact us ASAP if anything is missing at:
support@flatlinevanco.com

BEFORE YOU START

All Flatline Van Co products must be properly assembled and secured before attaching to your vehicle. Improper attachment could result in an automobile accident, and could cause serious bodily injury or death to you or to others involved. You are responsible for assembling and securing Flatline Van Co products to your vehicle, checking the mounting points and attachments prior to use, and regularly inspecting the products for wear and or damage. We always recommend you use a professional to install any aftermarket accessories to your vehicle. If you have no mechanical experience and are not thoroughly familiar with the installation procedures, you must have the product installed by a professional installer or other qualified persons. The responsibility is yours and must be taken seriously for everyone's safety.




PACKAGE CONTENTS



SPRINTER REAR DOOR EMBLEM


QTY: 1

HARDWARE

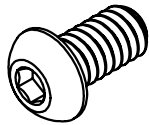

1/4-20 X 0.5 BUTTON HEAD
HEX DRIVE SCREW

QTY: 2



THREADLOCKER

QTY: 1

INSTALL

TOOLS REQUIRED FOR THIS STEP: + T25 TORX

STEP | 01 REMOVE OEM EMBLEM

1.1 Remove Factory Emblem Screws: Use a T25 Torx Wrench to remove the two Screws (FIG 3+4) holding the OEM Mercedes Sprinter Emblem from the Passenger Side Rear Door (FIG 1+2) of your van.



FIG 1



FIG 2



FIG 3



FIG 4

TOOLS REQUIRED FOR THIS STEP: + PRY TOOL

STEP | 01 REMOVE OEM EMBLEM

1.2 Remove Factory Emblem: Use a Pry Tool to gently peel the **Factory Emblem** from any adhesive backing, if applicable (FIG 5+6).

NOTE - The contours of the **Factory Emblem** and the **FVC Emblem** are the same, but the overall diameter is smaller on the **FVC Emblem** (FIG 7).



FIG 5



FIG 6



FIG 7

STEP | 02 INSTALL FVC EMBLEM

2.1 Position FVC Emblem: Position the **FVC Emblem** to the factory holes that held the **OEM Emblem** in place (**FIG 8**).

2.2 Thread in Hardware: Apply a small dab of **Threadlocker** to the supplied **1/4-20 Button Head Screws** and thread them in to the **FVC Emblem** (**FIG 9**).

NOTE - To maintain alignment, hold the emblem such that the contour of the emblem matches that of the rear door pinch seam (**FIG 10**).

2.3 Tighten Down Screws: Tighten down the fasteners, double-check your alignment and you're good to go! (**FIG 11**)



FIG 8



FIG 9



FIG 10



FIG 11

GET OUT AND EXPLORE!

+ LEAVE US A REVIEW

Happy with your new FVC product? We would love to hear (and see) from you! Head to the product page and click "Leave Review." Add a short review and upload a few photos to be showcased on the product page.

+ SHARE YOUR PICS

We love seeing how our customers use their FVC products and following along with your adventures. Tag us in your photos with: @flatlinevanco or send them to us via email. We love posting customer pictures in our feed!

+ NEED ANY HELP?

If you are having any issues with your product, please reach out, and we will make it right. FVC is a company of van and outdoor enthusiasts that design and use our own products, so we want you to be as stoked on your new parts as we are!



@FLATLINEVANCO